



WWW.BAINBRIDGEINT.COM



BOAT VENT 2 & 3 FITTING INSTRUCTIONS

- 1 Determine a spot in the cockpit or bow area that would allow water to run off best when supported. This area is typically not too far back from the windshield.
- 2 Cut or punch a 2 1/4" smooth hole in the fabric. Unscrew wingnut and slide off lower washer.
- 3 Push the lower washer flange up through hole from the underside of cover.
- 4 Push the cap down through the hole from the top side of the cover.
- 5 Then screw the wingnut on tightly from the underside of the cover.
- 6 Push pole into vent hole from the underside of cover and adjust cover for proper height. Use the knob to lock pole at proper height so that no dips where water could pool are evident.